


WT-1550-EM20L 1550nm EML external modulation optical transmitter

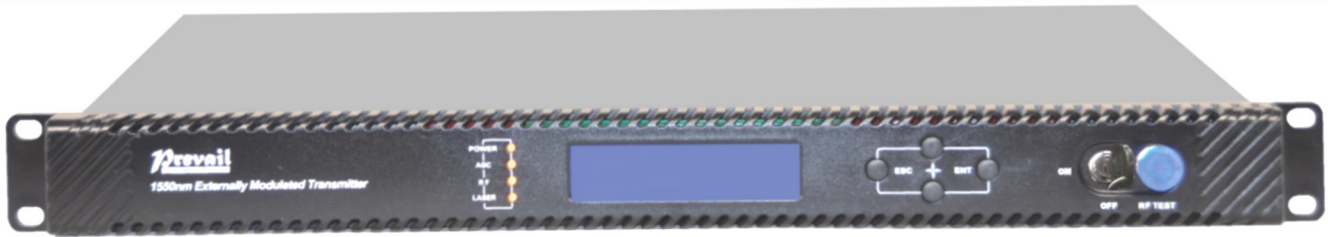

1. Product Overview

WT-1550-EM20L electro absorption externally modulated laser (EML) is an integrated device of EAM and DFB laser. With the advantages of performance, cost and volume, the application field has been gradually extended to CATV optical transmission system in recent years, which is used to replace direct modulation optical transmitter and external modulation optical transmitter using Mach-Zehnder modulator.

This machine adopts 1550nm EML laser, microwave source phase modulation, SBS maximum 20dBm.

2. Features

- 1G or 1.2GHz frequency (optional).
- SBS 13~20dBm, 1dB step continuously adjustable.
- RF AGC、MGC modes can be set.
- Real time monitoring of laser working parameters.
- Dual power supply , AC220V, DC48V are optional.
- Support SNMP NMS and WEB network management.

3. Technical Parameter

	Items	Unit	Technical Parameter
Optical part	Optical wavelength	nm	1550 (ITU wavelength is optional)
	Laser type		Electro absorption modulated laser (EML)
	Optical connector type		SC/APC or FC/APC
	Number of output ports		2
	Output optical power	dBm	7, 9, 10 (optional)
RF part	Frequency Range	MHz	47~1003/1218 (optional)
	RF input level	dBuV	80±5
	Flatness in band	dB	± 0.75
	Input return loss	dB	≥ 16
	RF AGC control range	dB	±5
	RF MGC adjustable range	dB	0~20
	SBS	dB	13~20, 0.5dB stepping
	RF input test port	dB	-20±1
	Laser drive RF level test port	dB	-20±1
	Electronically controlled optical attenuator tolerance	dB	≤1: attenuator 0-15dB ≤3: attenuator 16-20dB
Others	Maximum power consumption	W	≤20
	Power voltage	V	AC100V - 250V (50~60Hz), DC48V
	Operating temperature	℃	-5 ~ + 55
	Storage temperature	℃	-30 ~ + 70
	Dimension	mm	483 (L) X 455 (W) X 44 (H)

4. Link performance

4.1 Model Test Indicators


Test Model	All-Analog signal	All-digital signal	
Channel Plan	PAL 84	QAM256	
Channel Number	84	120	
Bandwidth Noise	5	5	
CNR Tx/Rx	52.5		
CNR Link 1	50.5		
CNR Link 2	49.5		
CSO Tx/Rx and Link 1	61	MER Link1	41
CSO Link 2	58	MER Link2	39
CTB	60		

4.2 Test Condition

	First stage EDFA	First paragraph fiber length	Second stage EDFA	Second paragraph fiber length	RX (dBm)	SBS (dBm)
Tx/Rx	No	No	No	No	0dBm	13.5
Link 1	No	35km	No	No	0dBm	13.5
Link 2	20dBm	50km	No	No	0dBm	20

5. Structure Description


5.1 Front panel

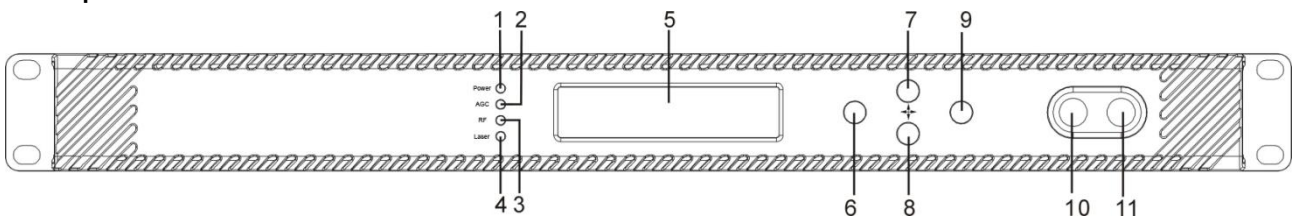

1	Power Indicator
2	AGC indicator
3	RF indicator: Green light is always on: drive level is normal. Red light is flashing: drive level alarm. Please view the alarm content in the Alarm Status Level 2 submenu.
4	Laser working status indicator: Green light is always on: the laser is working normally. Red light is always on: the laser is not turned on Red light is flashing: The device has a parameter alarm. You can view the alarm content in the Alarm Status Level 2 submenu.
5	LCD
6	ESC button
7	UP button
8	DOWN button
9	ENTER button
10	Laser switch key: ON: Laser is on OFF: Laser is off. Keep the laser off before the device is powered on, and turn on the laser after the power-on self-test is completed.

11	Laser drive level detection port: -20dB
-----------	---


5.2 Rear panel

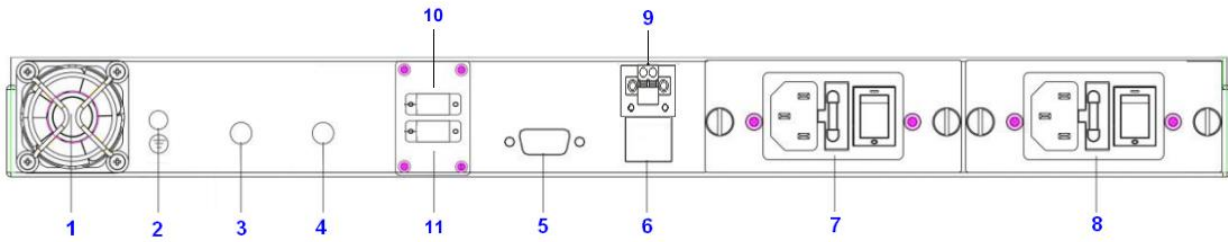

1	Fan	2	Ground stud	3	RF input port
4	RF test port	5	RS232 interface	6	LAN interface
7	Power module 2	8	Power module 1	9	Alarm socket
10	Optical output1	11	Optical output2		

6. Display menu operation instructions

6.1 Boot screen

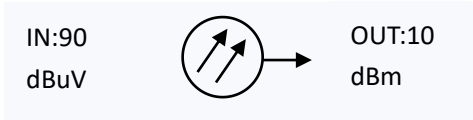

Laser drive level Output optical power

6.2 Disp Parameters

Laser Power	xxdBm	Laser output optical power
Voa Input	xx dBm	Optical power after the attenuator, this menu is not visible without the WDM model.
Master Input	xx dBm	External optical input power, this menu is not visible without the WDM model.
Laser Bias	xx mA	Laser bias current
Laser Temperature	xx °C	Internal temperature of the laser
Tec current	xx A	Laser cooling current
RF Channel	xx	Number of transmission channels of the system
Laser RF	xx dBuV	Laser drive level
RF Ctrl Mode	AGC	RF control mode
AGC Ref	x dB	AGC Offset (This menu is only available in AGC mode.)
MGC ATT	x dB	MGC Attenuation (This menu is only available in MGC mode.)
Wave Length	1550nm	Wavelength
+5V Read	x v	+5V Monitoring voltage
-5V Read	x v	-5V Monitoring voltage
+24V Read	x v	+24V Monitoring voltage
S/N	xx °C	Serial number
BOX Temperature		Current temperature inside the machine
IP Address		IP address of this machine
Mask		Subnet mask of this machine
Gateway		Gateway of this machine
Mac		MAC address of this machine
SoftWare Ver		Software version number

6.3 Set Parameters

Set LaserOutputUnit	mW/dBm	Optical power unit: dBm、mW are optional
Set BuzzerAlarm	YES/NO	Buzzer alarm: ON、OFF are optional
Set RF ControlMode	AGC/MGC	RF control mode: AGC、MGC are optional
Set MGC ATT	XX dB	MGC attenuation: 0-20 are optional
Set AGC Ref	XX dB	AGC Offset: ±3dB is optional
Set OPT ATT Mode	AUTO	Set the optical power attenuation mode: AUTO、Manu are optional
Set OPT ATT	XX dB	Set the optical power attenuation: 0~15dB are optional.
Set OPT Delta	XX dB	Set the difference between two optical power
Set SBS	XX dB	Setting SBS: 13 ~ 20 adjustable, 1dB step
Set Channel Number	XX	Number of channels: 0-100 are optional
Set IP Addr		Set the local IP address
Set Subnet Mask		Set the subnet mask
Set GateWay		Set gateway
Restore Factory Config		Restore factory configuration


this menu is not visible without the WDM model.

6.4 Alarm Status

RF Alarm	Driving level alarm: The default range 80~110dBuV, can be set through the network management.
Laser Temp	Laser temperature alarm: The default range 25±10°C, can be set through the network management.
Laser Bias	Laser bias current alarm: The default range 20 to 90 mA, can be set through the network management.
Laser TEC	Laser cooling current: The default range -1.5~1.5A, can be set through the network management.
Laser Output	Output optical power alarm: The default range 2 to 25 mW, can be set through the network management.
+5V Alarm	+5V alarm: The default range 5±1V, can be set through the network management.
-5V Alarm	-5V alarm: The default range -5±1V, can be set through the network management.
+24V Alarm	+24V alarm: The default range 24±2V, can be set through the network management.

7. WEB

(1) Opening the IE browser and entering the equipment IP address, username: **admin** password: 123456

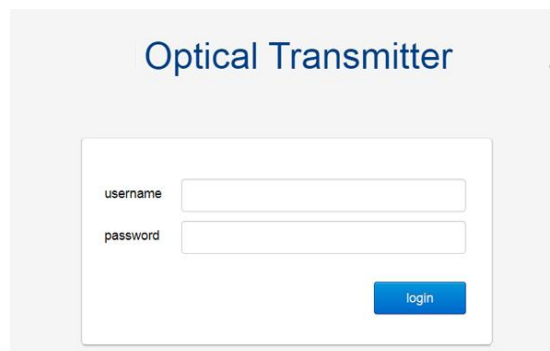

(2) Display Parameter: display parameters of optical transmitter

Display Parameter Modify Parameter Update File Active Alarms Modify Password	Parameter			
	Parameter	Current Value	New Value	press for update
	Device Model:	XX.XX-XX	Serial Number:	2020.09.15
	Optical Power:	10.4 dBm	Laser Bias:	86.2 mA
	Laser Temperature:	25.9 °C	Laser TEC:	30 mA
	RF Level:	0.0 dBm	Wavelength:	nm
	+5V:	4.92 V	-5V:	-5.04 V
	+24V:	23.80 V	Device Temperature:	33.8 °C
	MAC Addr:	30-ac-b1-67-ef-88		

(3) Modify Parameter: set optical transmitter parameters and IP address

Display Parameter

Modify Parameter

Update File

Active Alarms

Modify Password

Setting Parameter

Parameter	Current Value	New Value	press for update
Channel Number:	60	<input type="text" value="(1-200)"/>	<input type="button" value="Update"/>
RF Mode:	MGC	MGC ▾	<input type="button" value="Update"/>
AGC Offset:	7.5 dB	-8 ▾ dB	<input type="button" value="Update"/>
MGC ATT:	0 dB	0 ▾ dB	<input type="button" value="Update"/>
Set SBS:	13.0 dB	13 ▾ dB	<input type="button" value="Update"/>
UTC offset:	UTC+8:00	UTC-12:00 ▾	<input type="button" value="Update"/>

Ip Address Set

Parameter	Current Value	New Value	press for update
IP Address:	192.168.1.111	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>
Mask Address:	255.255.255.0	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>
GateWay Address:	192.168.1.1	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>
Trap1 Address:	0.0.0.0	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>
Trap2 Address:	192.168.1.77	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>
NTP1 Address:	202.108.6.95	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>
NTP2 Address:	192.168.1.237	<input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/> <input type="text" value="."/>	<input type="button" value="Update"/>

(4) Update File: Software online upgrade

Display Parameter

Modify Parameter

Update File

Active Alarms

Modify Password

Update firmware

Step 1: upload new firmware file

No files selected

Upload status: awaiting upload

Step 2: once **upload is successful**, restart to update firmware

(5) Active Alarms: Display active alarm information

Display Parameter

Modify Parameter

Update File

Active Alarms

Modify Password

Active Alarm Table

id	Time	Status	Value	Description
1	2020-1-5,13:56:11	Alarm	0.0 dBm	Input RF Power too low
2	2020-1-5,13:56:11	Alarm	86 mA	Laser Bias Current too low
3	2020-1-5,13:56:11	Alarm	1	Right power off

(6) Modify Password: change login and password

Display Parameter

Modify Parameter

Update File

Active Alarms

Modify Password

Change Login and Password

Parameters	Value
Current Username:	<input type="text"/>
Current Password:	<input type="text"/>
New Username::	<input type="text"/>
New password:	<input type="text"/>
Confirm Password :	<input type="text"/>
	<input type="button" value="Modify"/>

8. Attention

- Before unpacking, please confirm that the outer packaging is intact. If you think that the equipment has been damaged due to transportation, etc., do not power on to avoid more serious damage to the equipment or accidental injury to the operator.
- Before powering on the equipment, make sure that the grounding end of the chassis and power socket is reliably grounded. The grounding resistance should be $<4\Omega$, which can effectively protect against surge and static electricity.
- The optical transmitter is a professional and technical equipment. The installation and debugging must be carried out by professional technicians. Please read this manual carefully before operation to avoid damage to the equipment due to misoperation or accidental injury to the operator.
- When installing and debugging the optical device, there may be an invisible laser beam in the fiber connector. The fiber optic connector should be avoided to be aimed at the human body, even not be directly viewed by the naked eye to avoid permanent damage to body and eye!
- When the fiber connector is not in use, it should be put on the dust jacket to avoid dust pollution and keep the fiber end face clean.

